


AB-4.5S

Exploded View

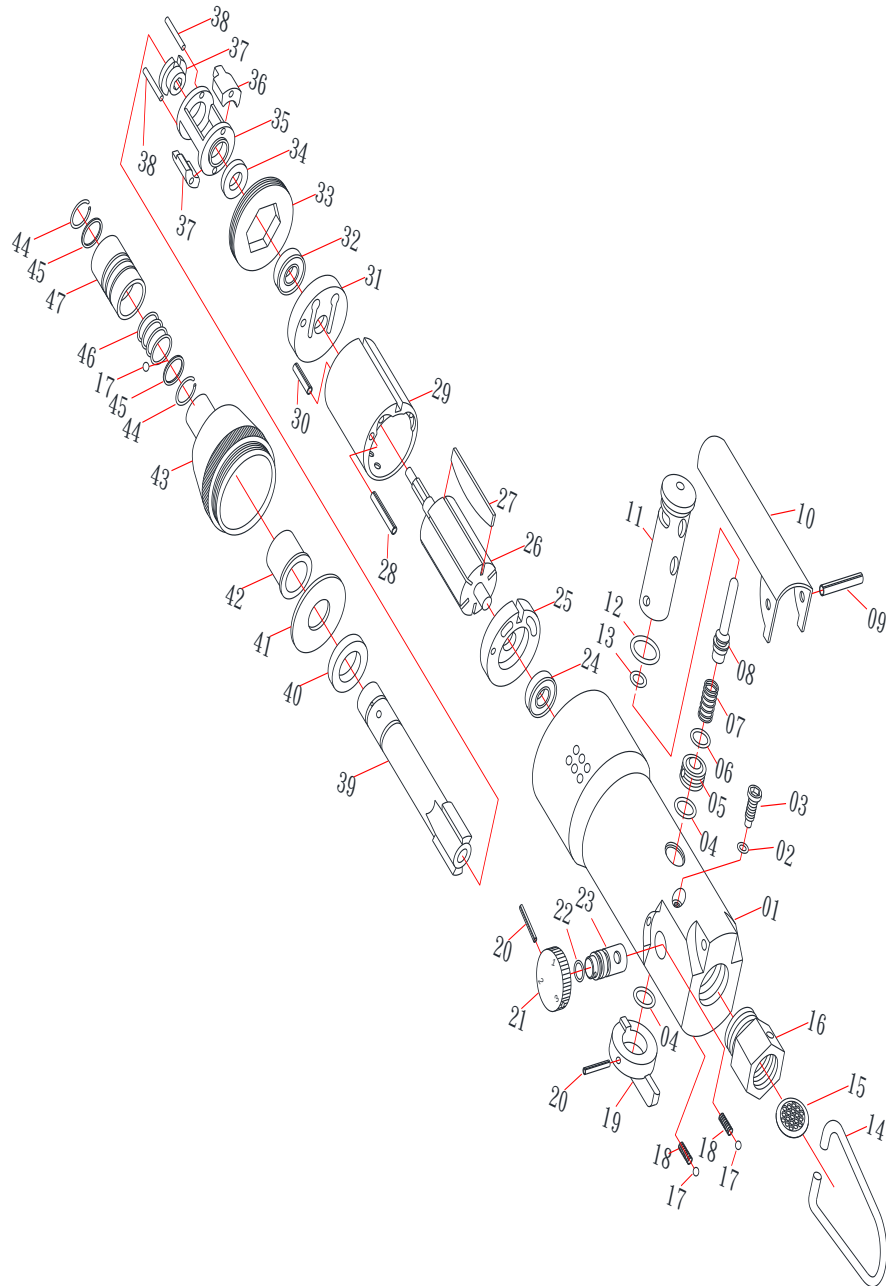

Parts List

NO.6

Index No.	Parts No.	Description	No. Req'd	Index No.	Parts No.	Description	No. Req'd
1	1510001	Motor Housing	1	27	1510021	Rotor Blade	6
2	0850032	"O"Ring	1	28	0840002	Spring Pin	1
3	0880004	Positioning Strew	1	29	1510015	Cylinder	1
4	0850033	"O"Ring	2	30	0840012	Spring Pin	1
5	0880005	Plug	1	31	1510017	Front End Plate	1
6	0850028	"O"Ring	1	32	0860001	Bearing	1
7	0810007	Throttle Valve Spring	1	33	1510019	Nut	1
8	1510020	Throttle Valve	1	34	0800053	Thrust Plate	1
9	0840010	Spring Pin	1	35	1510006	Hammer Frame	1
10	1510018	Bar	1	36	1510008	Hammer	2
11	1510011	Reverse Sleeve	1	37	1510007	Driver	1
12	0850003	"O"Ring	1	38	0840021	Hammer Pin	2
13	0850030	"O"Ring	1	39	1510009	Anvil Shank	1
14	0830001	Suspensor	1	40	1510013	Transmission Sleeve	1
15	0800011	Washer	1	41	0800002	Spacer	1
16	1510014	Air Strainer Assembly	1	42	1510002	Housing Bushing	1
17	0870001	Steel Ball	3	43	1510003	Clutch Housing	1
18	0810003	Spring	2	44	0810025	Circlet	2
19	1510004	Reverse Valve Lever	1	45	0800003	Washer	2
20	0840037	Spring Pin	2	46	0810001	Spring	1
21	1510005	Control Valve Knob	1	47	1510012	Block Sleeve	1
22	0850038	"O"Ring	1				
23	1510022	Control Valve	1				
24	0860002	Bearing	1				
25	1510016	Rear End Plate	1				
26	1510010	Rotor	1				

※We reserve the right to make changes to the designs of the parts without prior notice.